



Fastener Tightening Specifications

Application	Specification	
	Metric	English
Front Door Inside Door Handle Screw	3 N·m	27 lb in
Front Door Latch Screws	10 N·m	89 lb in
Front Door Lock Striker Screws	27 N·m	20 lb ft
Front Door Outside Handle Screws	7 N·m	62 lb in
Front Side Door Switch Plate Screws	2 N·m	18 lb in
Rear Compartment Striker Bolts	10 N·m	89 lb in
Rear Door Latch Screws	10 N·m	89 lb in
Rear Door Lock Striker Screw	20 N·m	15 lb ft


Driver Door Module Power and Ground

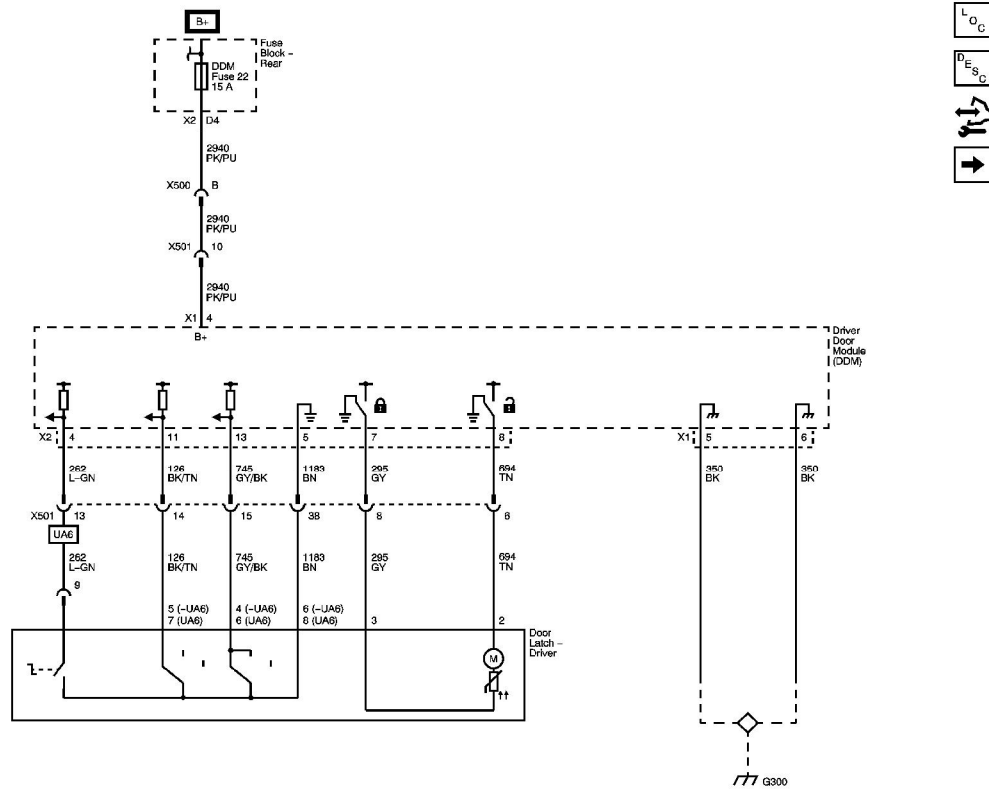


Front Passenger Door Module Power and Ground

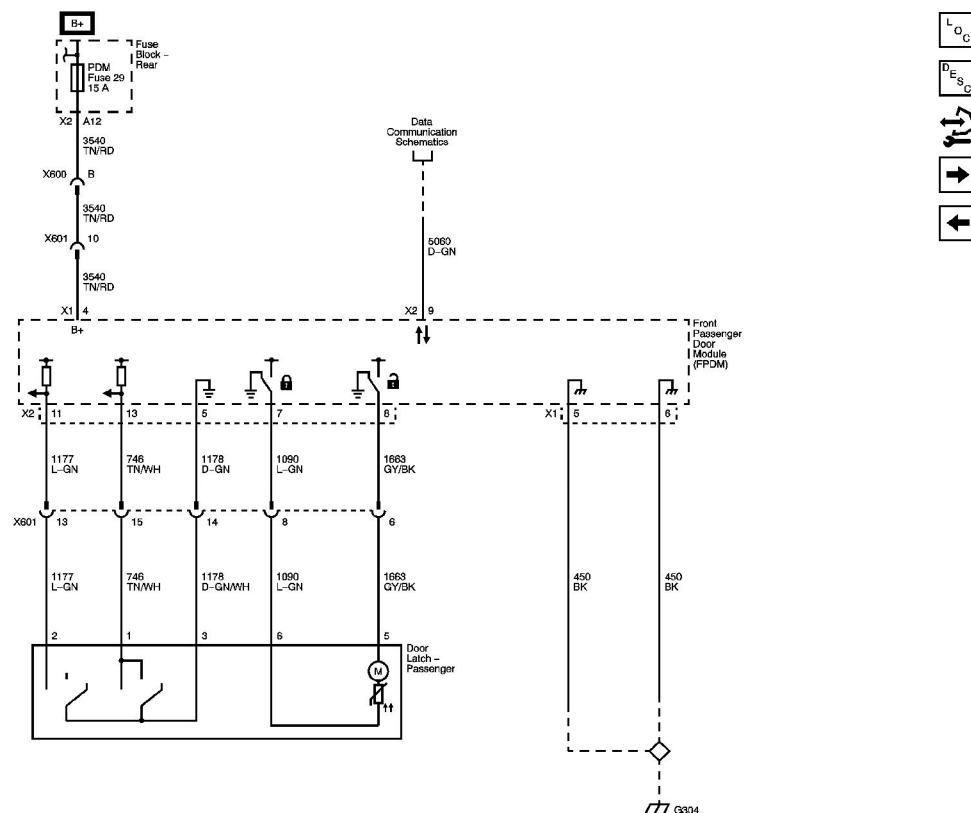


Door Lock, Unlock Relays

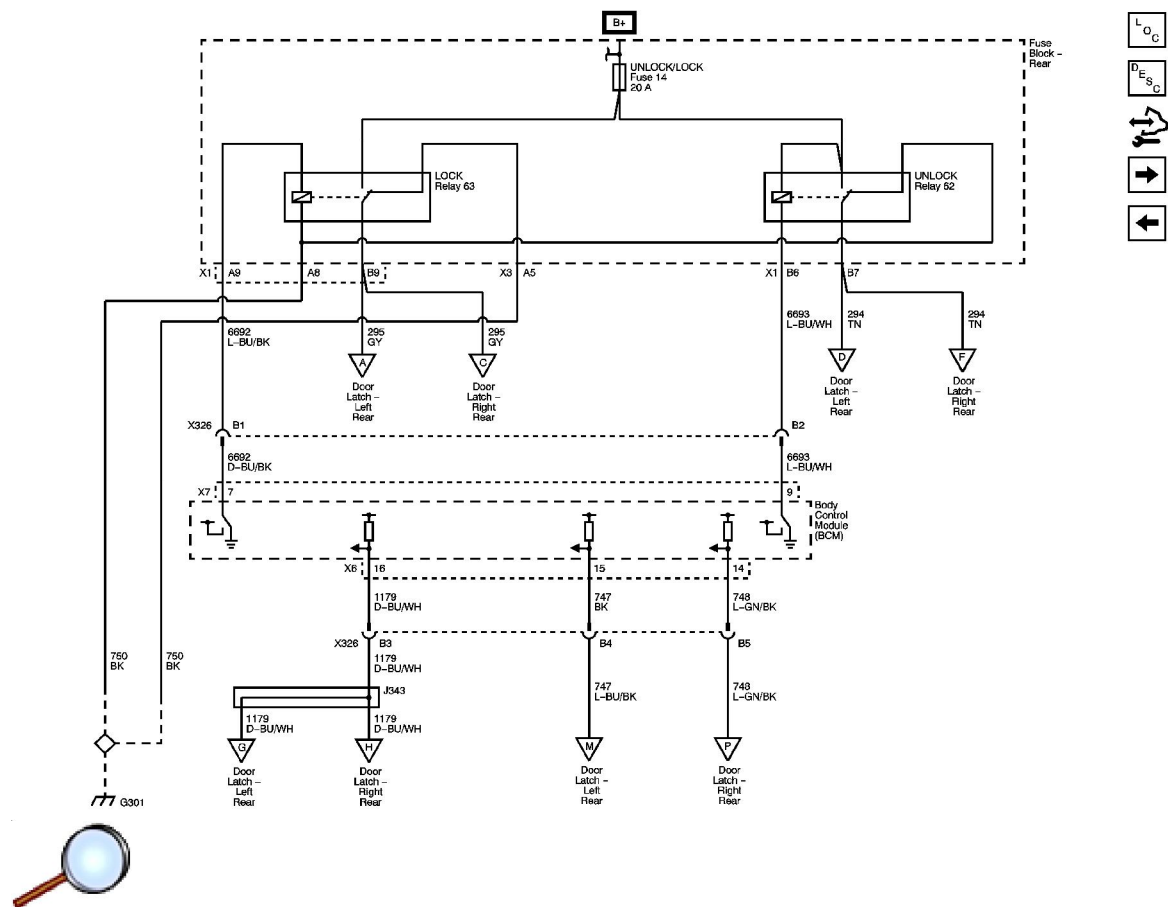


Rear Door Latch Assemblies

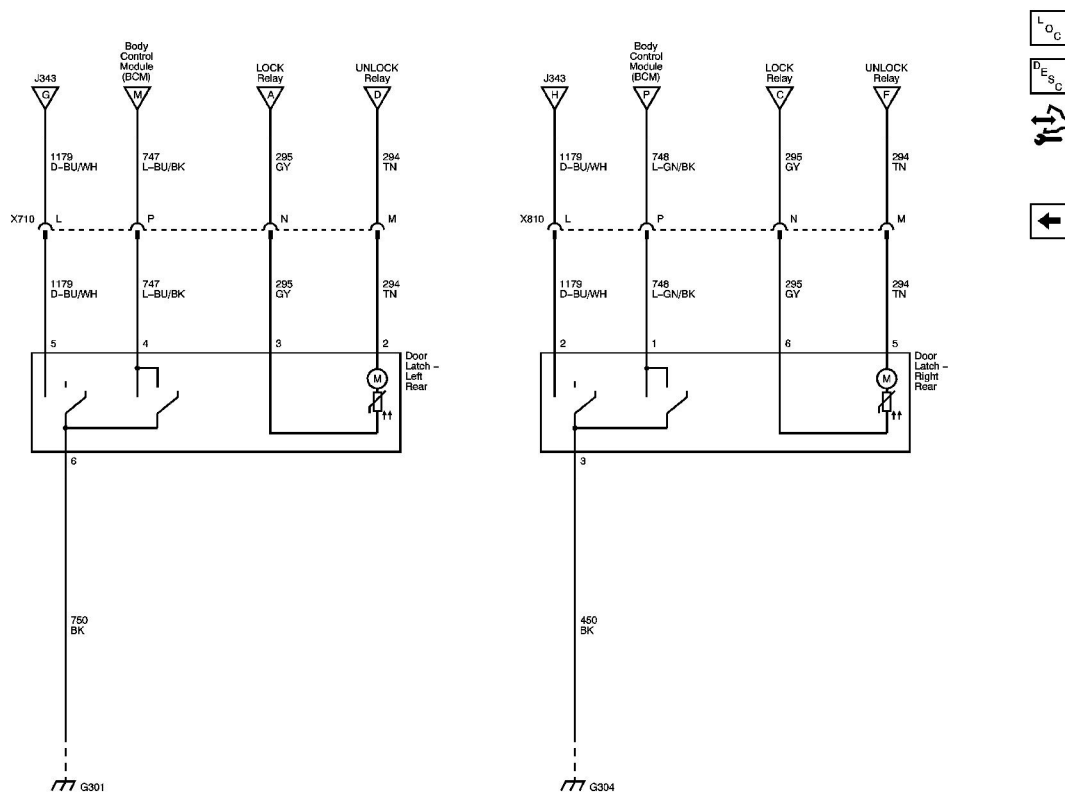

Driver Door Module (DDM)

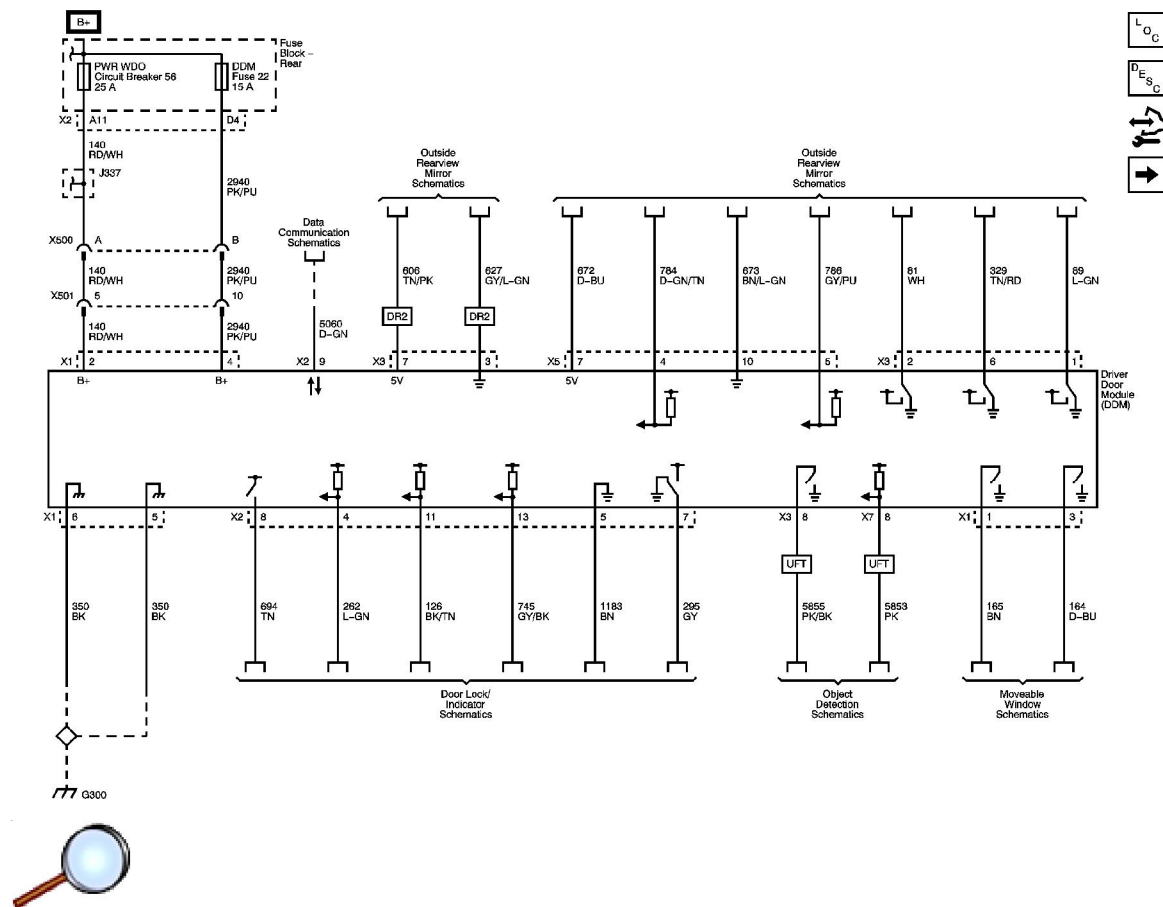


Front Passenger Door Module (FPDM)

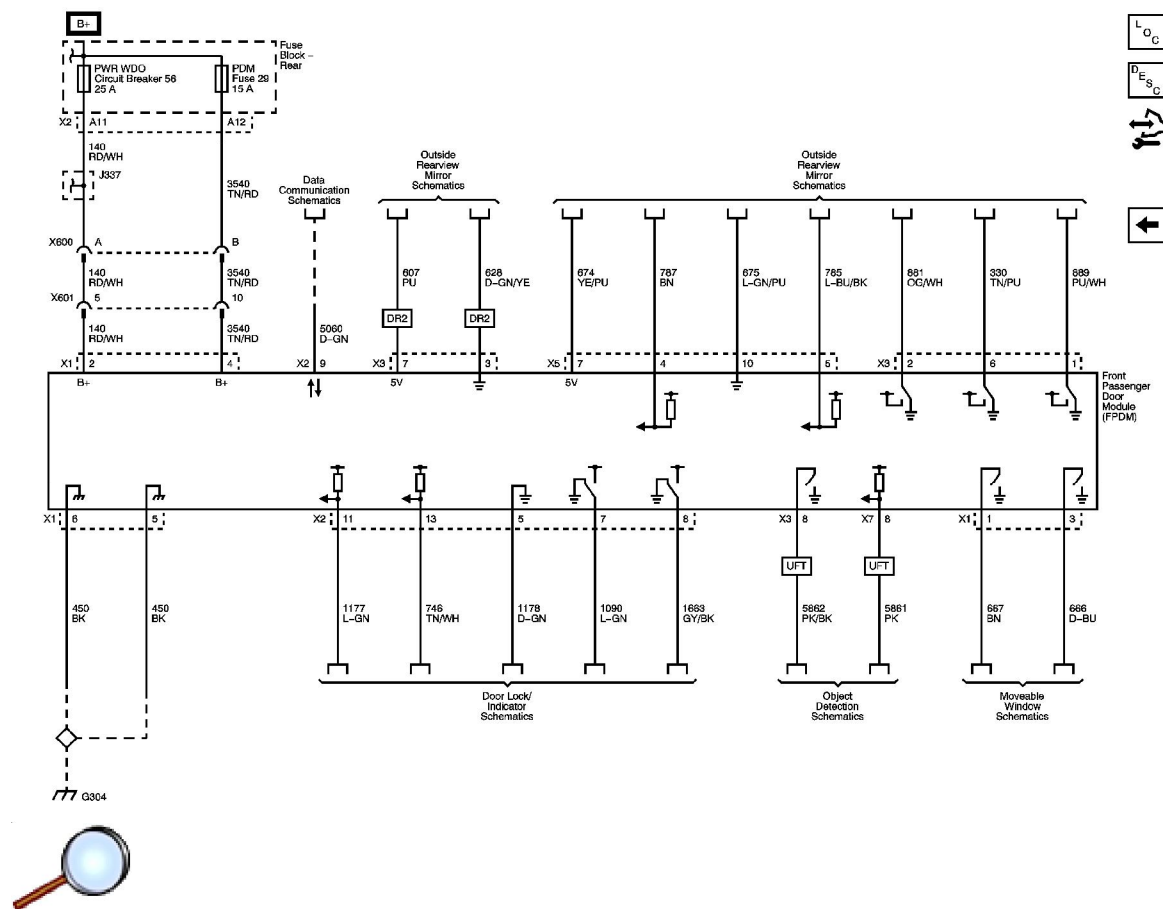


Release Systems Schematics

Trunk Release and Rear Compartment Latch

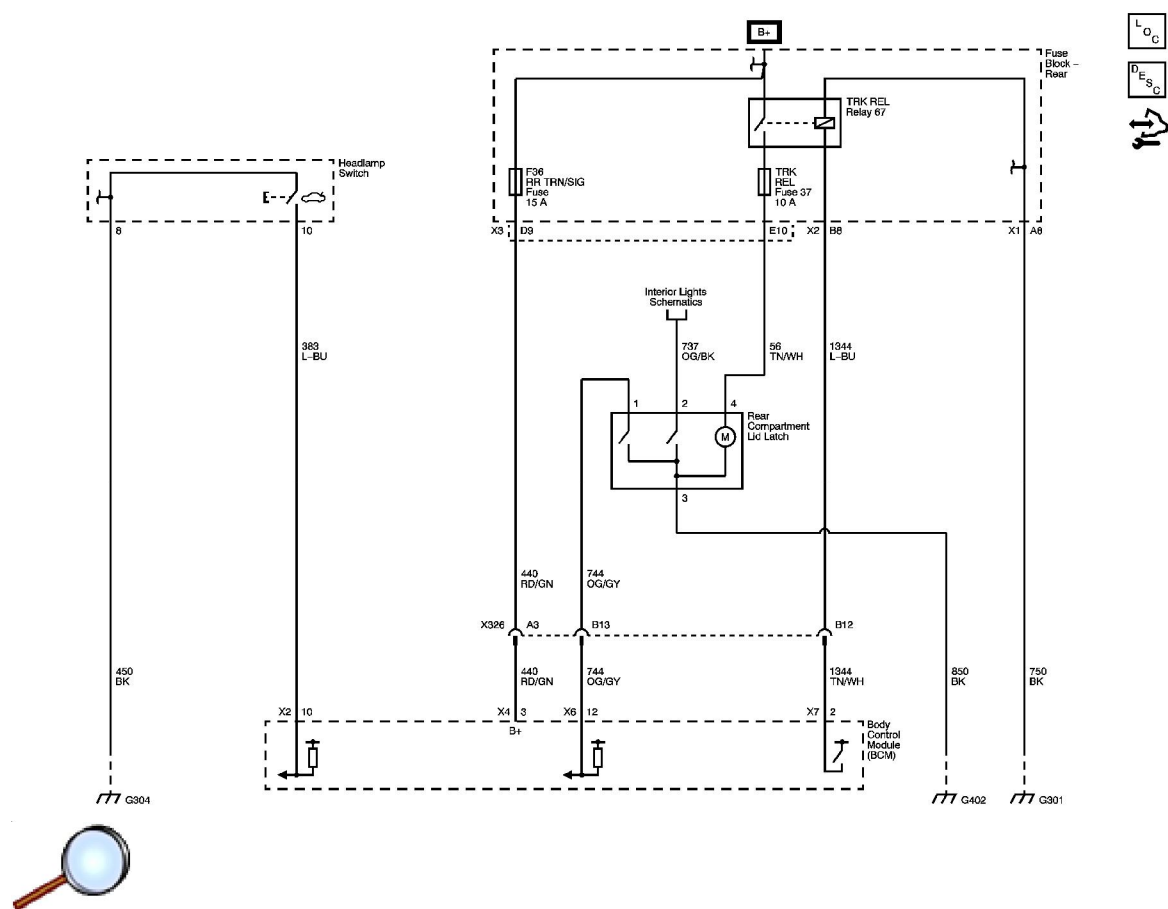


Door Lock Cylinder Replacement

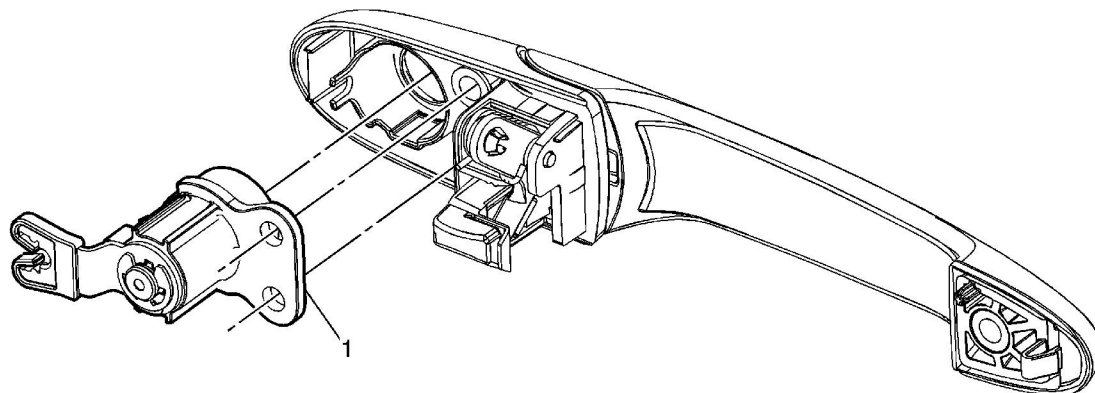


Callout	Component Name
<p>Notice: Refer to Fastener Notice in the Preface section.</p> <p><i>Fastener Tightening Specifications:</i> Refer to Fastener Tightening Specifications .</p> <p>Preliminary Procedure</p> <p>Remove front door handle. Refer to Front Side Door Outside Handle Replacement .</p>	
1	<p>Front Door Lock Cylinder</p> <p>Tip Lock cylinder will be separated from handle once the handle is removed from the door.</p>

Front Side Door Outside Handle Replacement

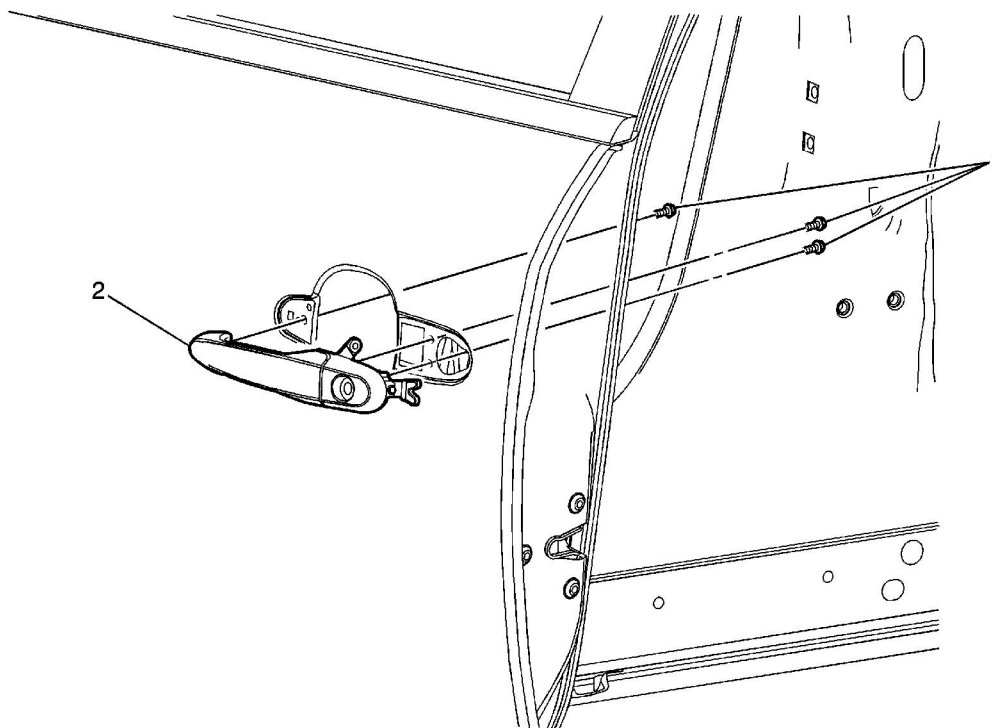


Callout	Component Name
<p>Notice: Refer to Fastener Notice in the Preface section.</p> <p><i>Fastener Tightening Specifications:</i> Refer to Fastener Tightening Specifications .</p> <p>Preliminary Procedure</p> <p>Remove the front door trim pad. Refer to Front Side Door Trim Panel Replacement .</p>	
1	Front Door Outside Handle Screws (Qty: 3) Tip Disconnect the lock rod. Tighten 7 N·m (62 lb in)
2	Front Door Outside Handle

Rear Side Door Outside Handle Replacement

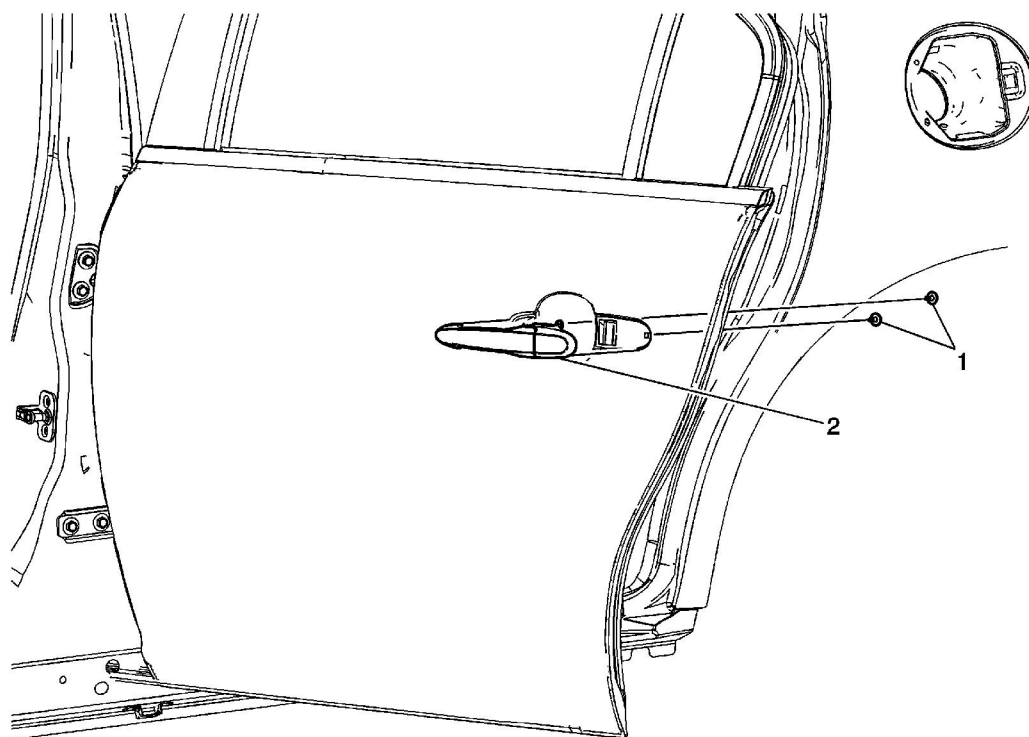

Callout	Component Name
<p>Notice: Refer to Fastener Notice in the Preface section.</p> <p><i>Fastener Tightening Specifications:</i> Refer to Fastener Tightening Specifications .</p> <p>Preliminary Procedure</p> <ol style="list-style-type: none"> 1. Position the window approximately halfway down in the door. 2. Remove trim panel. Refer to Rear Side Door Trim Panel Replacement . 3. Remove water deflector. Refer to Rear Side Door Water Deflector Replacement . 	
1	Rear Door Outside Handle Bolts (Qty: 2) Tighten 7 N·m (62 lb in)
2	Rear Door Outside Handle Tip Disconnect the lock rod.

Front Side Door Latch Replacement


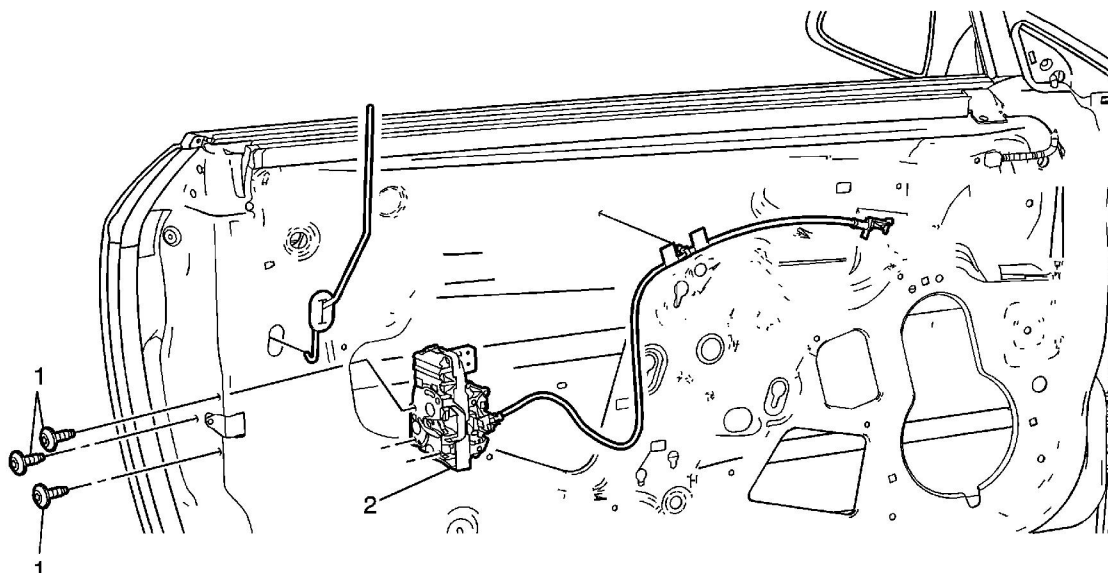


Callout	Component Name
Preliminary Procedures 1. Remove the interior trim panel. Refer to Front Side Door Trim Panel Replacement . 2. Remove the water deflector. Refer to Front Side Door Water Deflector Replacement . 3. Remove the outside door handle. Refer to Front Side Door Outside Handle Replacement .	
1	Front Side Door Lock Screw (Qty: 3) Notice: Refer to Fastener Notice in the Preface section. Tighten 10 N·m (89 lb in)
2	Front Side Door Lock Assembly Procedure 1. Release the door lock cable retainers from the door. 2. Disconnect the door lock electrical connector. 3. Remove the door lock with the handle housing.

© 2011 General Motors Corporation. All rights reserved.


	4. Remove the handle and lock rods from the lock.
--	---

Rear Compartment Lid Latch Replacement

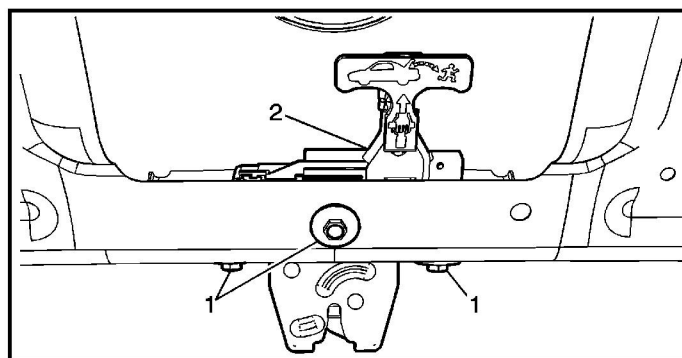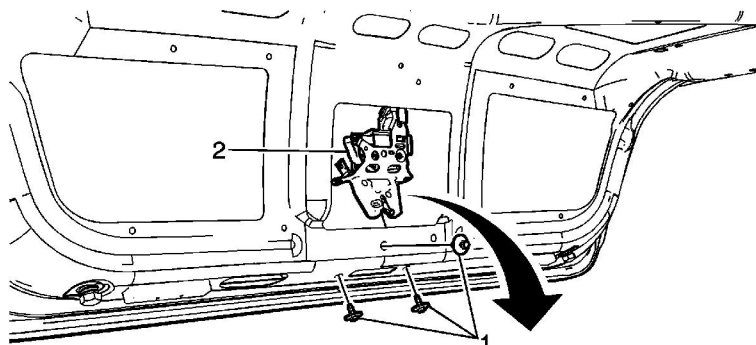

Callout	Component Name
1	Rear Compartment Lid Latch Bolt (Qty: 3) Notice: Refer to Fastener Notice in the Preface section. Tighten 10 N·m (89 lb in)
2	Rear Compartment Lid Latch

Rear Side Door Latch Replacement

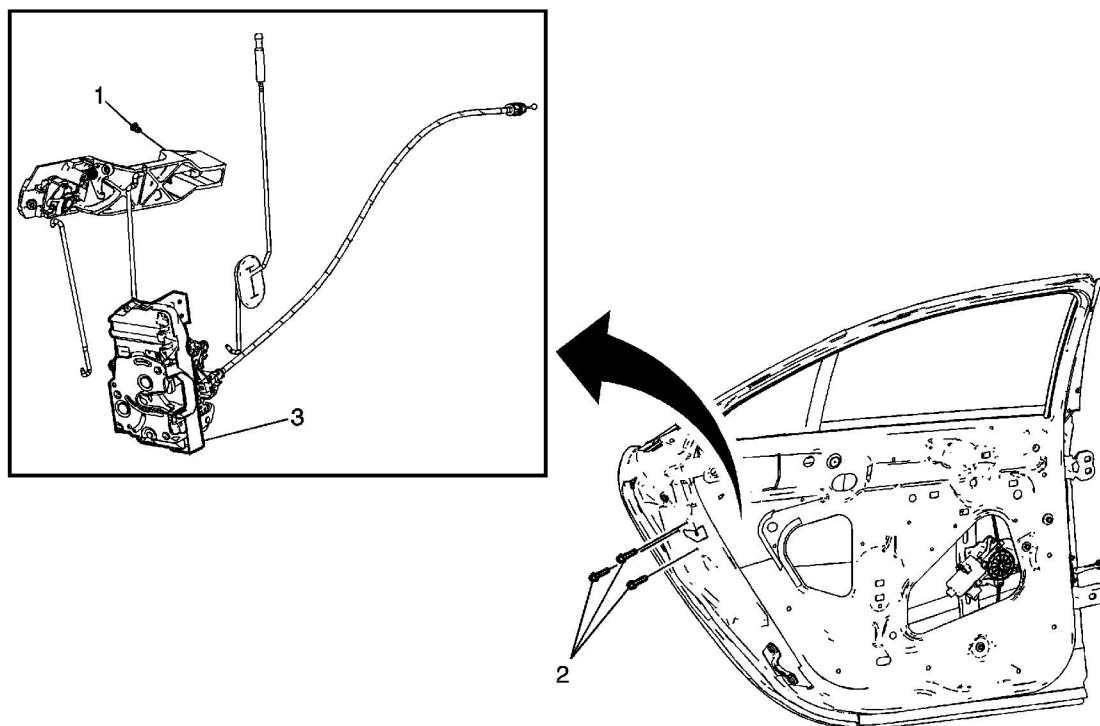


Callout	Component Name
Preliminary Procedures <ol style="list-style-type: none"> 1. Remove the rear door outside handle. Refer to Rear Side Door Outside Handle Replacement. 2. Remove the interior trim panel. Refer to Rear Side Door Trim Panel Replacement. 3. Remove the water deflector. Refer to Rear Side Door Water Deflector Replacement. 	
1	Rear Side Door Outside Handle Housing Screw Notice: Refer to Fastener Notice in the Preface section. Tighten 10 N·m (89 lb in)
2	Rear Side Door Lock Bolt (Qty: 3) Tighten 10 N·m (89 lb in)
	Rear Side Door Lock Assembly Procedure

© 2011 General Motors Corporation. All rights reserved.


3	<ol style="list-style-type: none">1. Release the inside handle cable retainers before removing the door lock.2. Disconnect the door lock electrical connector.3. Remove the door lock with the outside handle housing.4. Transfer the handle and lock rods to the new door lock.
---	---

Door Lock Striker Adjustment

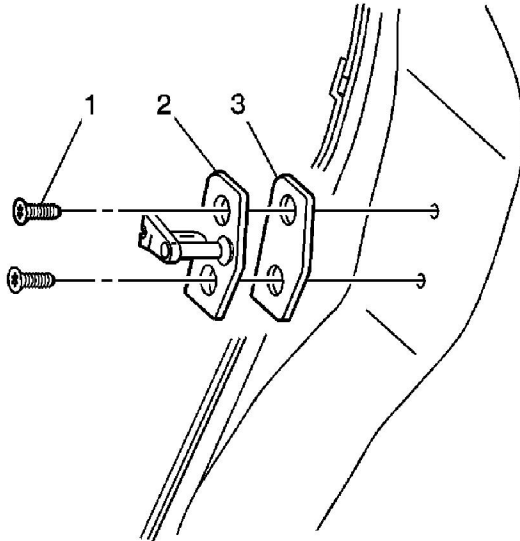

Important: To determine if the striker adjustment is required, proceed as follows.


1. Ensure that the door is properly aligned with the door opening before proceeding with the striker adjustment.
2. Open and close the door on the striker (2). Note if the door drags on the striker causing the door to move upward or downward upon contact with the striker. Also note the closing effort to fully engage the latch.

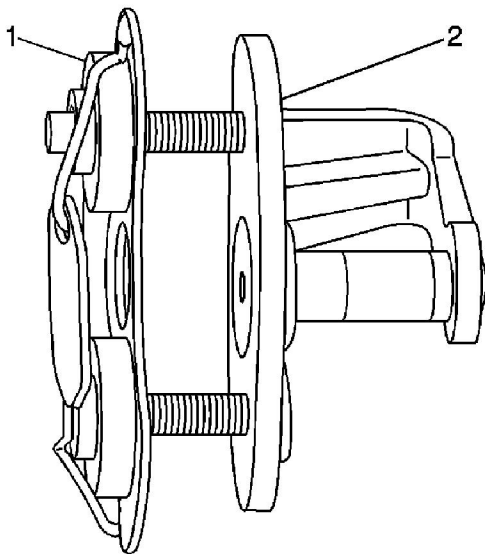



Important: When the striker bolts have been removed, the striker anchor plate (1) will slip down in the door pillar or quarter panel and the trim will need to be removed to gain access.

3. Using a soft marker, mark around the striker (2) for reference of the original position. Loosen the striker screws just enough to allow the movement of the door striker and shims if equipped.

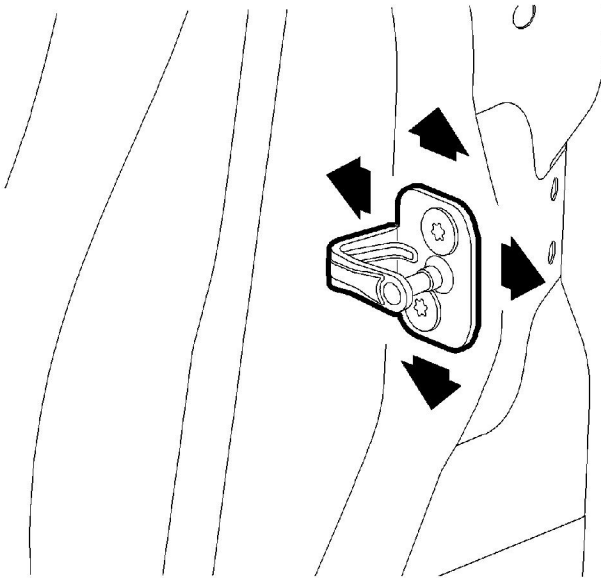

4. Adjust the door striker up or down and inboard or outboard as required.
5. Move the striker to eliminate drag on the striker and door latch and to achieve proper door position within door opening. Start with up/down position, then position the striker to achieve proper alignment to the door opening. Set the in/out adjustment for proper door seal engagement ensuring that the door closing efforts are correct.

Notice: Refer to [Fastener Notice](#) in the Preface section.


6. Adjust the striker and add spacers as required.

Tighten

Tighten the screws to 25 N·m (18 lb ft).


7. Inspect the door for proper operation.
8. Close the door.

Door Striker Replacement

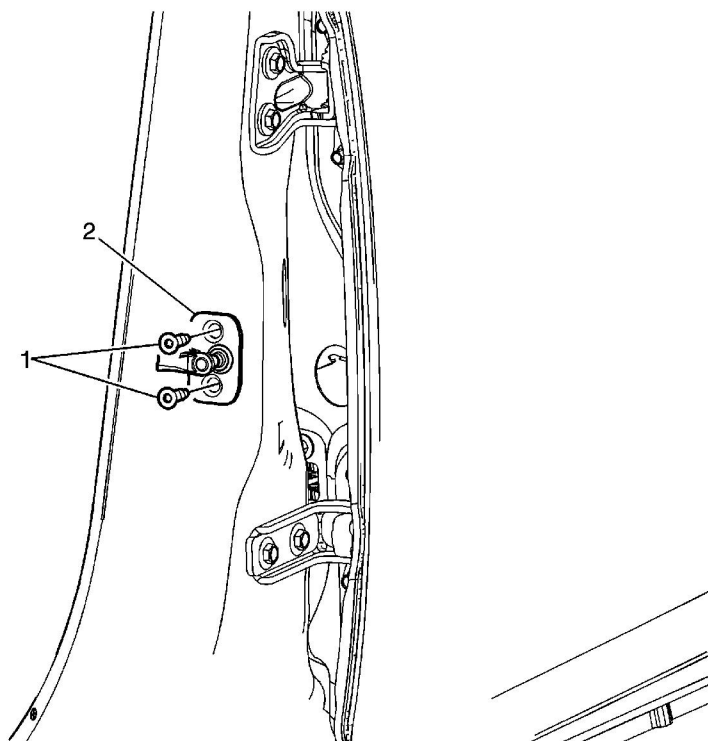


Callout	Component Name
Notice: Refer to Fastener Notice in the Preface section.	
<i>Fastener Tightening Specifications:</i> Refer to Fastener Tightening Specifications .	
1	Front Door Lock Striker Screws (Qty: 3) Tighten 27 N·m (20 lb ft)
2	Front Door Lock Striker Tip Adjust as necessary.

Rear Compartment Latch Striker Replacement

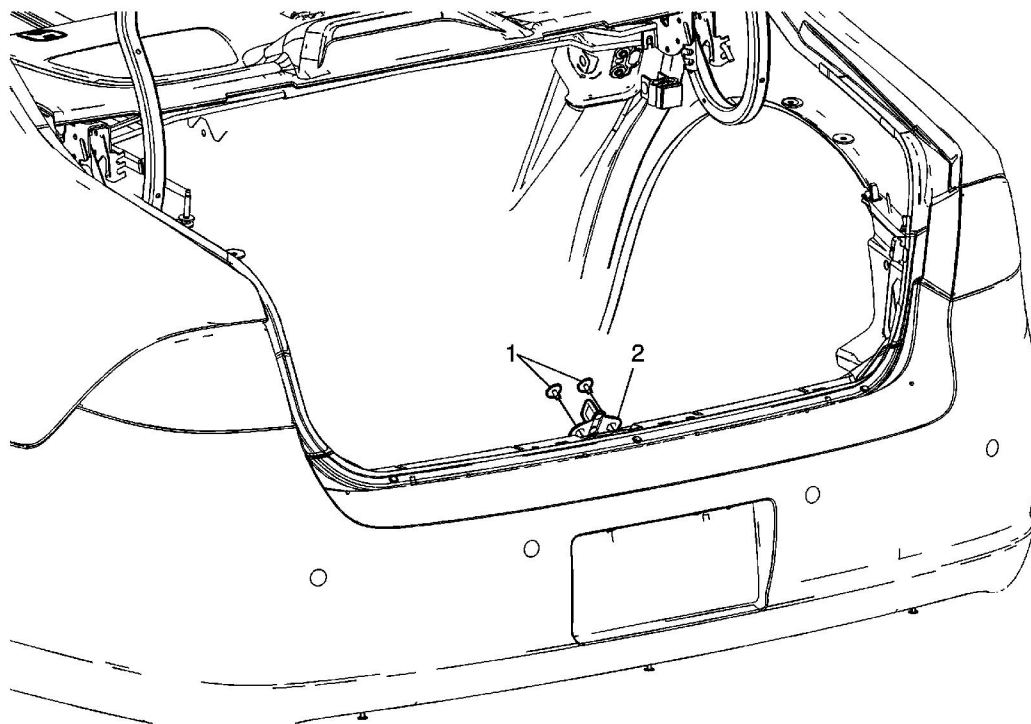

Callout	Component Name
Preliminary Procedure	
Remove rear compartment sill plate. Refer to Rear Compartment Sill Trim Plate Replacement .	
1	Rear Compartment Striker Bolts (Qty: 2) Notice: Refer to Fastener Notice in the Preface section. Tighten 10 N·m (89 lb in)
2	Rear Compartment Striker

Door Lock and Side Window Switch Replacement - Driver Side


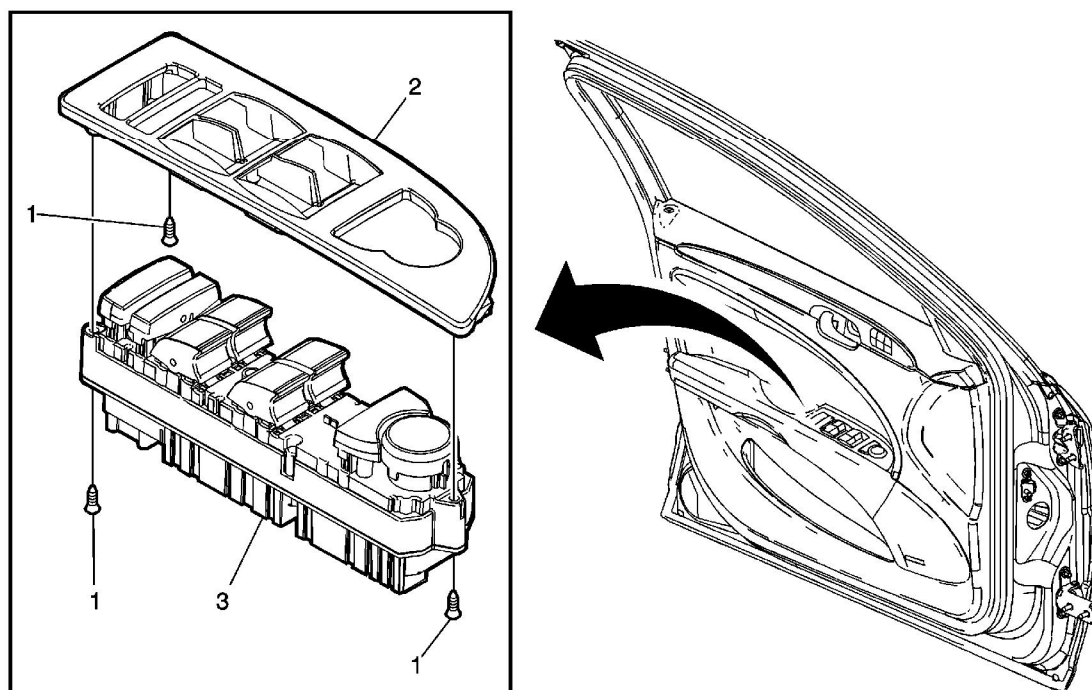


Callout	Component Name
<p>Notice: Refer to Fastener Notice in the Preface section.</p> <p><i>Fastener Tightening Specifications:</i> Refer to Fastener Tightening Specifications .</p> <p>Preliminary Procedure</p> <p>Remove the door trim panel. Refer to Front Side Door Trim Panel Replacement .</p>	
1	Front Side Door Switch Plate
2	Front Side Door Switch Screw (Qty: 3) Tighten 2 N·m (18 lb in)
3	Front Side Door Switch Assembly Tip The power window, door lock, and power mirror switch are included in the one switch.

© 2011 General Motors Corporation. All rights reserved.

Refer to [Control Module References](#) for programming and setup information.

Door Lock and Side Window Switch Replacement - Passenger Side

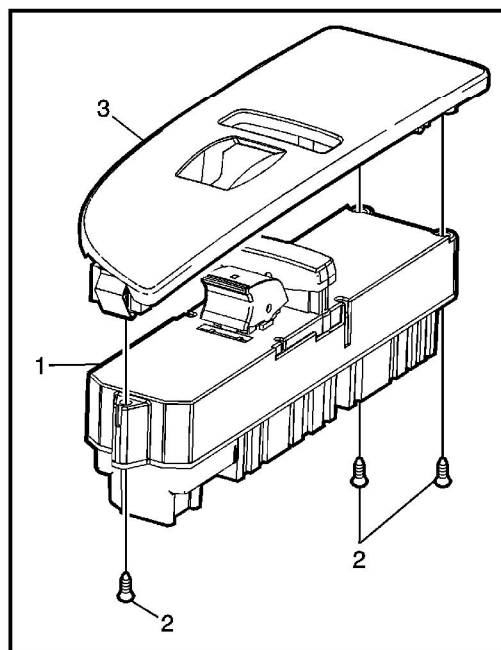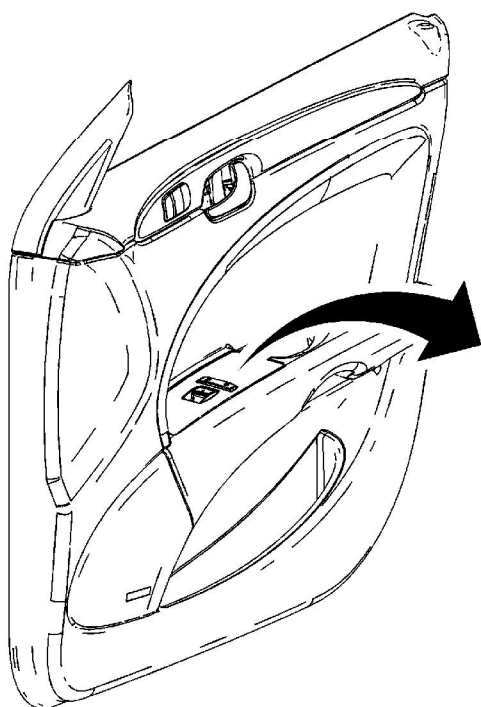


Callout	Component Name
Notice: Refer to Fastener Notice in the Preface section.	
<i>Fastener Tightening Specifications:</i> Refer to Fastener Tightening Specifications .	
Preliminary Procedure	
Remove the door trim panel. Refer to Front Side Door Trim Panel Replacement .	
1	Front Side Door Switch Plate
2	Front Side Door Switch Screw (Qty: 3) Tighten 2 N·m (18 lb in)
3	Front Side Door Switch Assembly Tip The power window and door lock are included in the one switch.

© 2011 General Motors Corporation. All rights reserved.

Refer to [Control Module References](#) for programming and setup information.

Rear Compartment Lid Release Switch Replacement

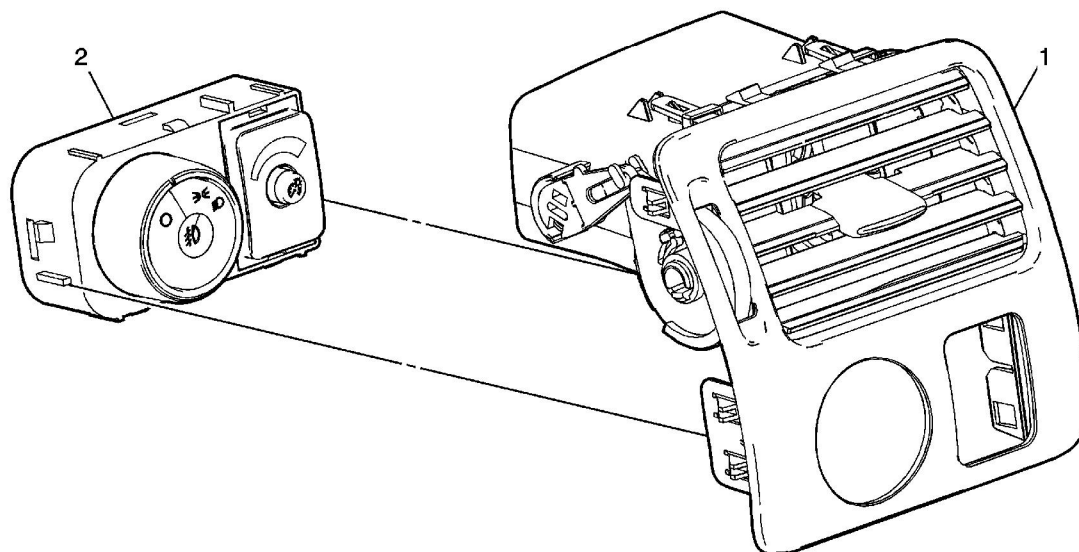

Callout	Component Name
<i>Fastener Tightening Specifications:</i> Refer to Fastener Tightening Specifications .	
1	Instrument Panel Outer Air Outlet Assembly Left Refer to Instrument Panel Outer Air Outlet Replacement - Left Side .
2	Headlamp Switch Assembly Tip The rear compartment release switch is integral to the headlamp switch and must be replaced as an assembly.